

Thermostat (TP760)

- Installer Instructions




Handling


The HRV Cool Plus™ digital thermostat has a slim, modern design with simple functionality. It has Easy-to-read, energy-efficient LED-based display that turns off when the screen is not in use. The simple controls are via backlight captive touch buttons.

Installation


Positioning

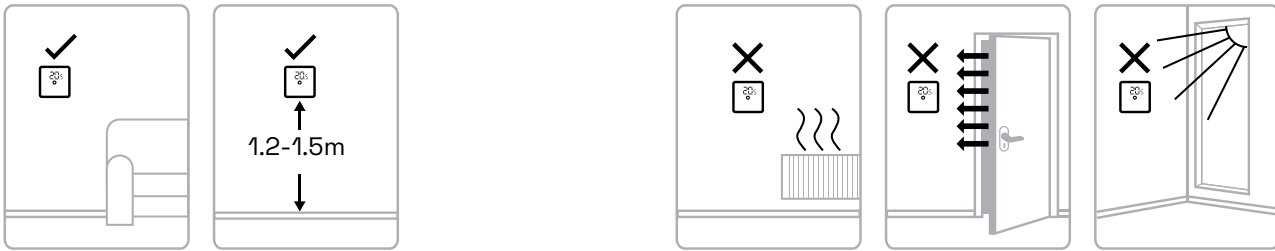

Mounting

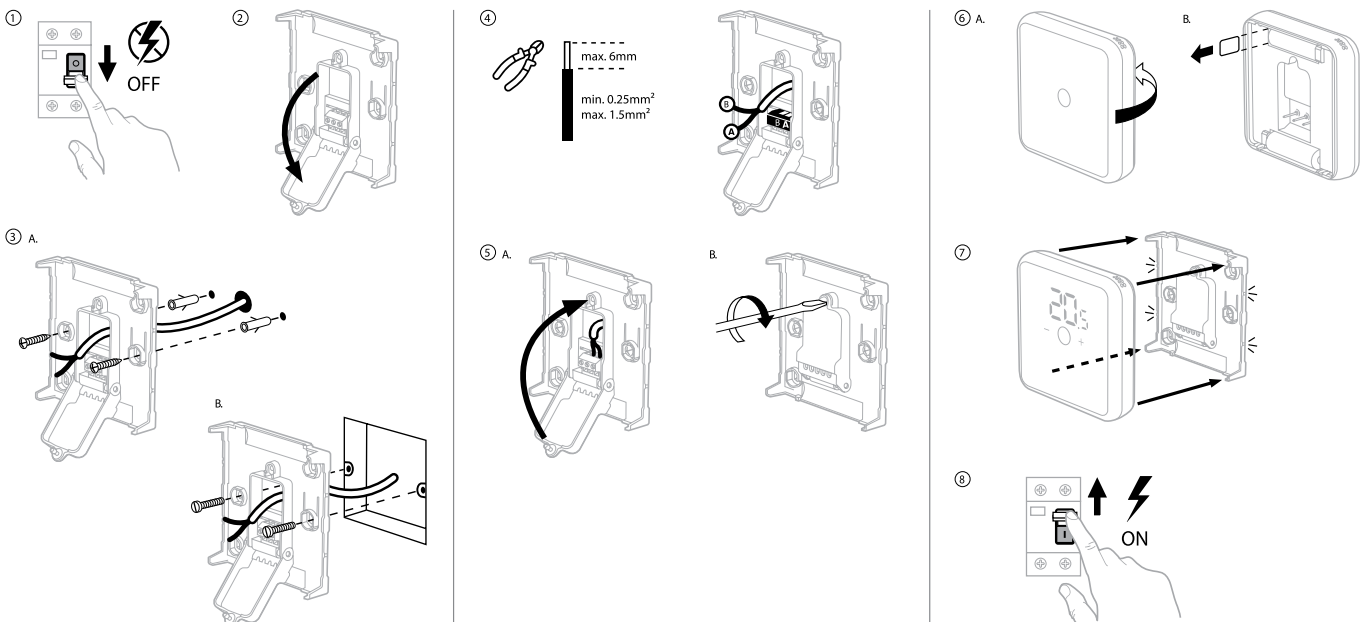


Operation

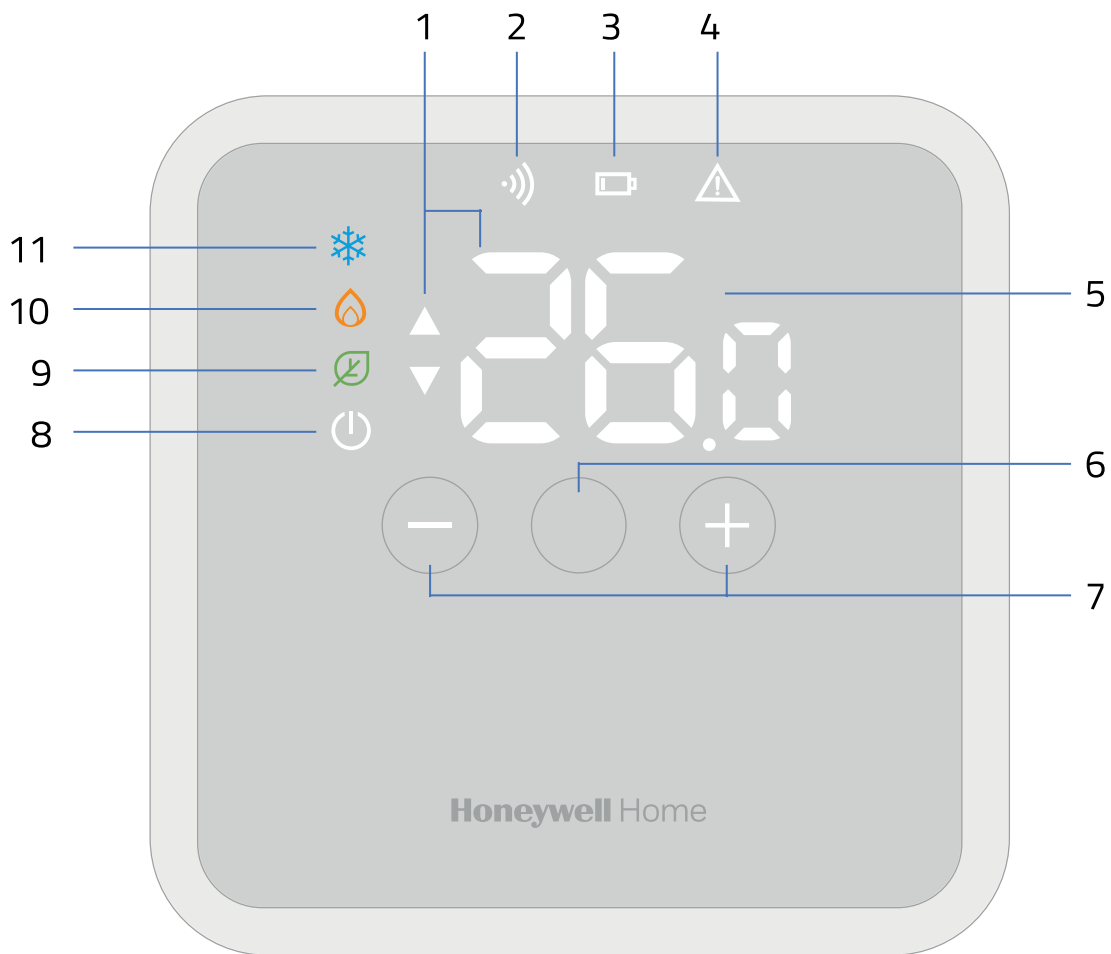


1. - Set Temperature Adjust
2. - Wireless signal (DT4R only)
3. - Low battery
4. - Alert
5. - Room Temperature
6. - Wake Up / Select
7. - Adjust Temperature / Settings
8. - OFF Mode
9. - ECO Mode
10. - Heating Demand
11. - Cooling Demand

Change to Cooling mode

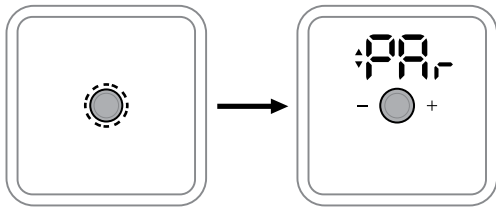


5 s


1. Press and hold main button for 5 secs to get into the setup screen.

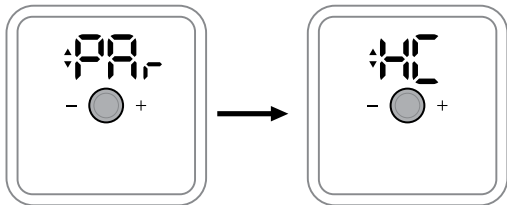


2. Press again to get into the heating/cooling options

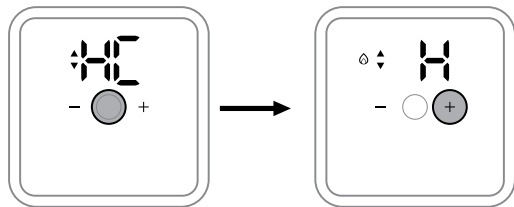


3. Press again to adjust the settings.

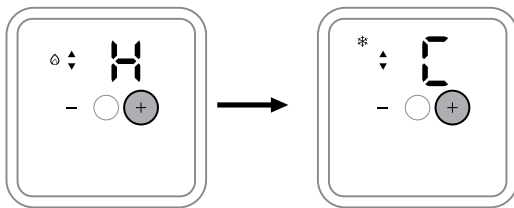

4. Use the + button to select Cooling

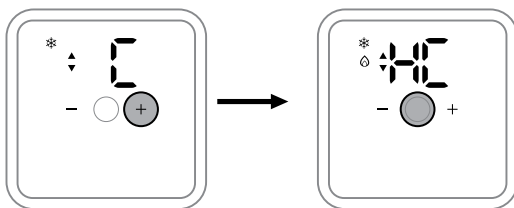


5. Press main button to confirm the setting

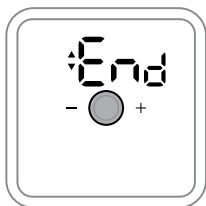

6. Keep pressing the + button to get to the End and then the main button to confirm exit.


Increase minimum On and Off time to 5mins (Default 1min)

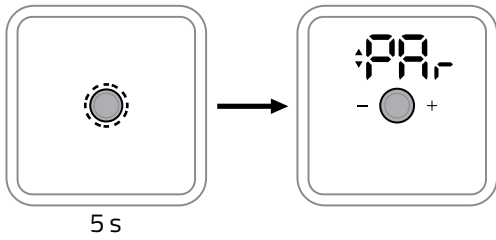


1. Press and hold main button for 5 secs to get into the setup screen.




2. Press again to get options screen.

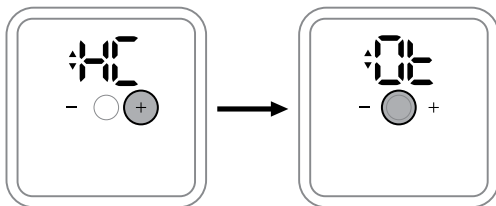


3. Use the + button to select Minimum On Time and the main button to adjust.

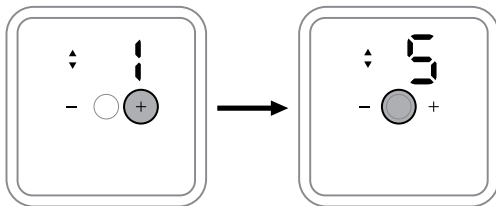


4. Use the + button to increase the time from 1 to 5mins and the main button to confirm the setting.

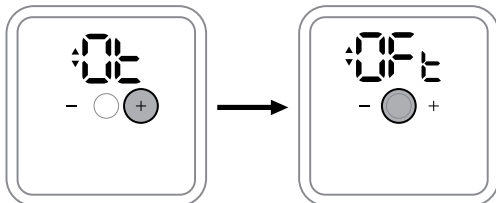

5. Use the + button to select Minimum Off Time and the main button to adjust.

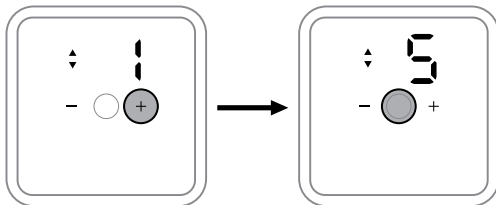


6. Use the + button to increase the time from 1 to 5mins and the main button to confirm the setting.

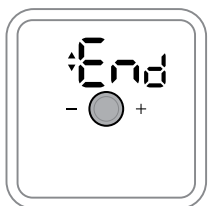


7. Keep pressing the + button to get to the End and then the main button to confirm exit.

Configuring Eco Mode on Honeywell DT4 Thermostat Instructions


Eco Mode is a function of the thermostat which can be used to prevent the cooler from operating for a chosen length of time by increasing the temperature set point during this period. It is indicated by a green leaf symbol on the display and is configured as follows:

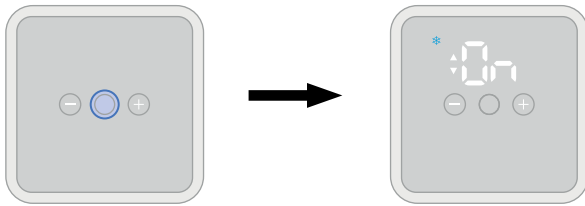

1. Press the main button twice until "On" or "Off" is displayed.

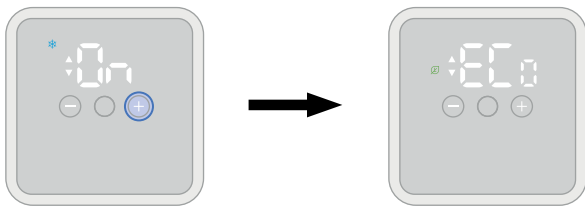

2. Press the + button until Eco is shown.

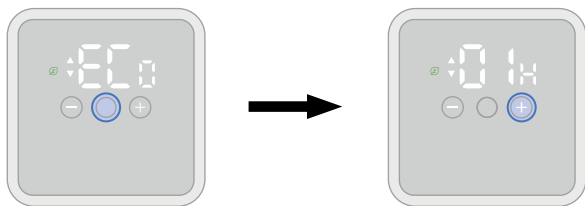

3. Press the main button, the current length of time the thermostat will remain in Eco mode is displayed (default 1 hour), use the + button to set to the required time (max 24 hours).




4. Press the main button, the current temperature set point in Eco mode is shown, by default this will be 2°C above the normal set point, use the + button to increase this if required (max 40°C).



5. Press the main button, the Eco Mode set point will flash and the display will go off.


Increase thermostat minimum setting to 26°C, if required (default 10°C)

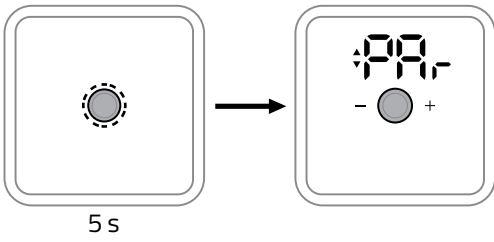


1. Press and hold main button for 5 secs to get into the setup screen.



2. Press again to get options screen.

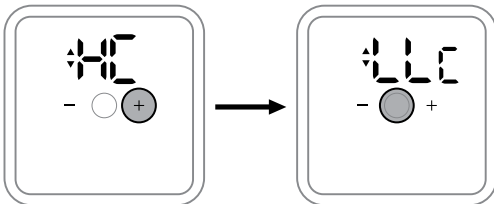

3. Use the + button to select the lower limit cool and the main button to adjust.

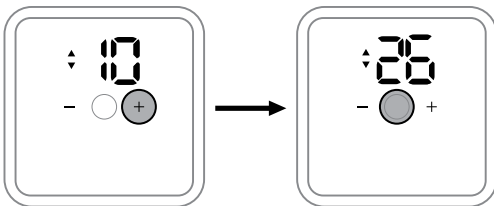

4. Use the + button to increase the minimum temperature from 10°C to 26°C and the main button to confirm the setting.



5. Keep pressing the + button to get to the End and then the main button to confirm exit

Current room temperature and set point adjustment



1. Single press of main button shows current room temperature..



2. Single press then the +/- buttons adjusts the set point temperature



3. Double press and you can change from On/Eco/Off using +/- buttons

Battery Replace

